LED DANCE FLOOR

GS-LD 01

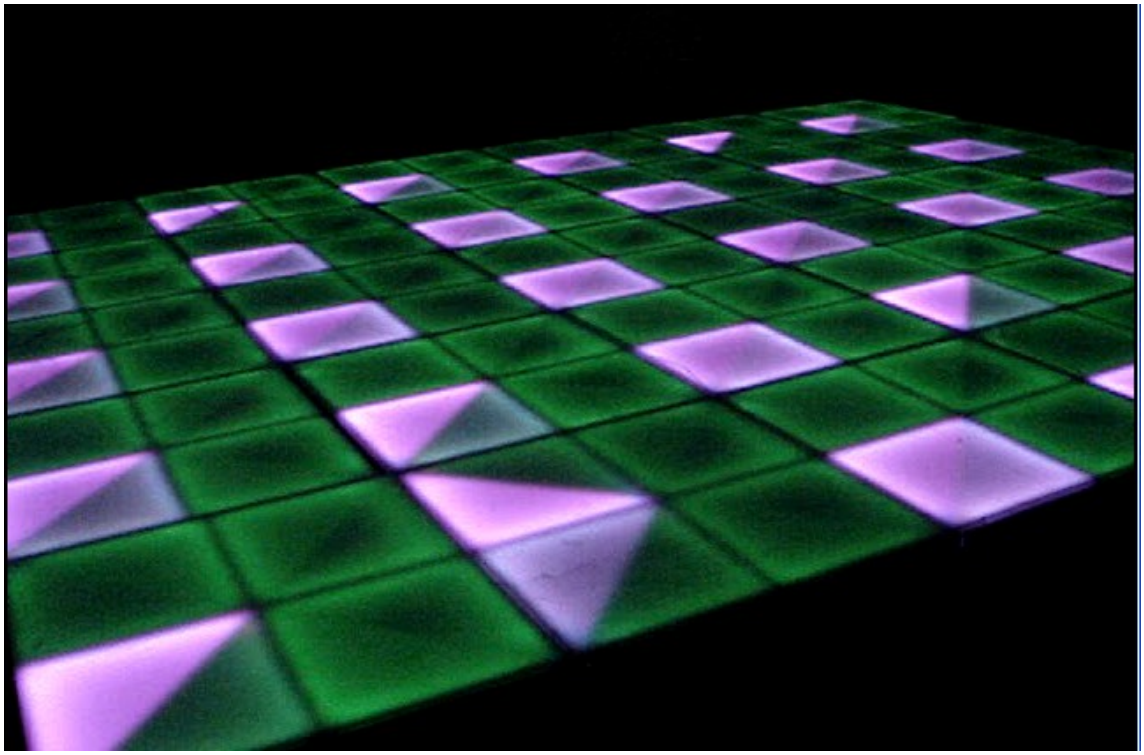

USER MANUAL

1.BEFORE YOU BEGIN

Unpacking instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present,and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or te carton itself shows signs of mishandling. Save te carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and pacing

Safety Instructions

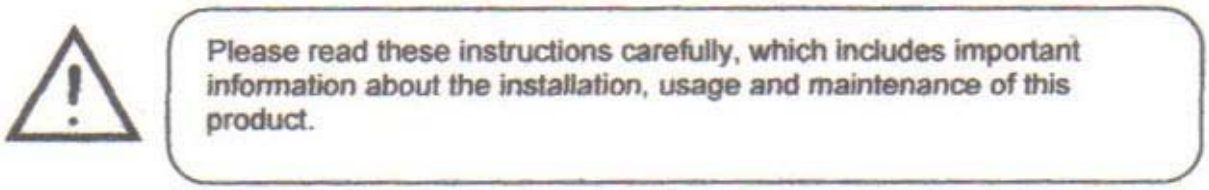
Please read these instructions carefully, which includes important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future consultation,if you sell the unit to another user,be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage,and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only!
- To prevent risk of fire or shock,do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation,at least 50cm (20in) from adjacent surfaces,Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
- Secure fixture to fastening device using a safety chain ,Never carry the fixture solely by its head.Use its carrying handles.
- Maximum ambient temperature(Ta) is 35 degree,Do not operate fixture at temperatures higher than this.
- In the event of a serious operating problem,stop using the unit immediately.Never try to repair the unit by yourself,Repairs carried out by unskilled people can lead to damage or malfunction.Please connect the nearest authorized technical assistance center,Always use the same type spare parts.
- Don’t connect the device to a dimmer pack.
- Make sure the power cord is never crimped of damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

Caution!!! There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs Yourself . In the Unlikely event your unlikely event your unit may require service. Please contact Our service department.

INTRODUCTION

Thank you for selecting LED DANCE FLOOR LIGHT, Specification is as belowing:

Specification:

Voltage：100v -240v 50/60hz
Light Source: 10mm*432 RGB LEDs
Power consumption :60W
Dimensions: 1000*1000*140mm
Weight:48kg

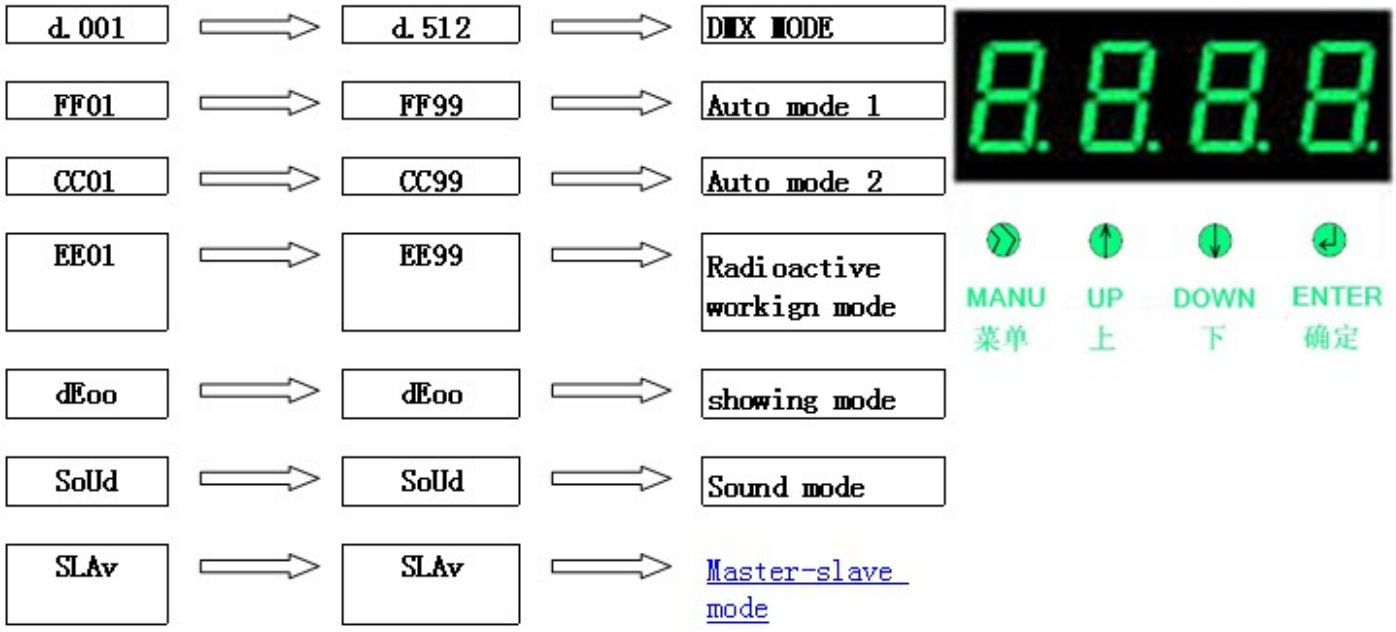

二：DMX Channels table

CH1	Rotation effect of 8lines	0-5	lighting off
		6-49	Rotating Function on the cross,no color in the base
		50-104	Rotating Function on the cross, color in the base
		105-154	Color rotation
		155-204	square effect rotation
		205-252	full color rotation
		253-255	Manual mode · start CH8-CH31 dimmer

CH2	rotation speed and direction of 8 lines	0-127	Corotation - speed adjustable
		128-255	Rollback--Speed adjustable
		128	single watering effect
		192	two section method for watering effect
		255	full lighting
		19-37	G
		38-55	B
		56-73	RG
		74-91	GB
		92-109	RB
		110-127	RGB
CH3	rotation speed of shooting	0-32	no rotation
		33-255	single rotation and speed adjustable
CH4	line 1	0-255	R from bright to dark

CH5	Line 1	0-255	G from rgith to dark
CH6		0-255	B from rgith to dark
CH7	line 2	0-255	R from rgith to dark
CH8		0-255	G from rgith to dark
CH9		0-255	B from rgith to dark
CH10	line 3	0-255	R from rgith to dark
CH11		0-255	G from rgith to dark
CH12		0-255	B from rgith to dark
CH13	line 4	0-255	R from rgith to dark
CH14		0-255	G from rgith to dark
CH15		0-255	B from rgith to dark
CH16	line 5	0-255	R from rgith to dark
CH17		0-255	G from rgith to dark
CH18		0-255	B from rgith to dark
CH19	line 6	0-255	R from rgith to dark
CH20		0-255	G from rgith to dark
CH21		0-255	B from rgith to dark
CH22	line 7	0-255	R from rgith to dark
CH23		0-255	G from rgith to dark
CH24		0-255	B from rgith to dark
CH25	line 8	0-255	R from rgith to dark
CH26		0-255	G from rgith to dark
CH27		0-255	B from rgith to dark

三：Specification

- Face plate12/15 mm optional acyrlicboard
- LEDS：432pcs ＊ φ10 RGB LED
- Channels：27 DMX512 channels
- sound mode,DMX512 mode,Master/Slave mode.